

E52 Pocket Drone Flying Instructions:

1. Press battery into bottom of E52 with connector aligned.
2. Unfold and deploy the 4 rotors. Unfold back rotors first.
3. Press power switch on E52 drone for one second to turn it on.
4. Place drone on a flat level surface.
5. Turn on transmitter. (Note that drone is easier to fly in “headless mode”.)
6. For headless mode, press “MODE” button while standing directly behind drone. (Lights blink.)
7. Press “UP” button to take off.
8. Right joystick moves drone forward/backward and left/right.
9. Left joystick is throttle (up/down) and yaw (rotate left/right).
10. Press “SPEED” button to increase speed. (3 speeds are 1-beep, 2-beeps, 3-beeps.)
11. Press “FLIP” button followed by right joystick move to flip 360 degrees.
12. Press “RET” button in emergency and drone will return roughly back to launch area.
13. Press “DOWN” button or throttle down to land.
14. Press power switch on E52 drone for one second to turn it off.
15. To remove drone battery for charging, squeeze side tabs on battery and pull.
16. To store drone, fold in the front rotors first, then back rotors.

