

## E52 Pocket Drone WiFi Instructions:

1. Turn on smart phone.
2. Go to “App Finder” and search for “WiFi UFO” and “JY UFO”.
3. Download “WiFi UFO” app for Android Phones. Download “JY UFO” for I-Phones.
4. Install battery into E52.
5. Unfold and deploy the 4 rotors.
6. Turn power switch on E52 drone to ON and place drone on flat level surface.
7. Put phone into “Airplane Mode”.
8. Go to “Settings” on phone, select “WiFi” and select “WiFi UFO”.
9. After a few seconds, WiFi UFO should indicate ”Connected, No Internet”.
10. Start the WiFi UFO app.
11. Press the “?” symbol to see detailed instructions for the WiFi UFO app.
12. Press the back-arrow icon to return to the “Play” icon on the WiFi UFO app.
13. Press the “Play” icon. Video from the drone should appear within a few seconds.
14. Press the camera icon on the WiFi UFO screen to take a photo.
15. Press the movie camera icon on the WiFi UFO screen to start & stop a video.
16. Turn on transmitter.
17. Press “Mode” button for headless mode.
18. Press “Up” button to take off.
19. Left joystick is throttle (up/down) and yaw (turn left/right).
20. Right joystick is for moving forward/backward and left/right.
21. Press “Flip” button followed by right joystick move to flip 360 degrees.
22. Press “Ret” button to bring drone back to launch area.
23. Press “Down” button or throttle down to land.
24. Press the “rotating-arrow” icon on the WiFi UFO app to see photos and videos.
25. Connect phone to a computer with a USB cable to download photos & videos.
26. Take phone out of “Airplane Mode” when done.



WiFi UFO Icon